


Auto Glide Quick Reference Guide

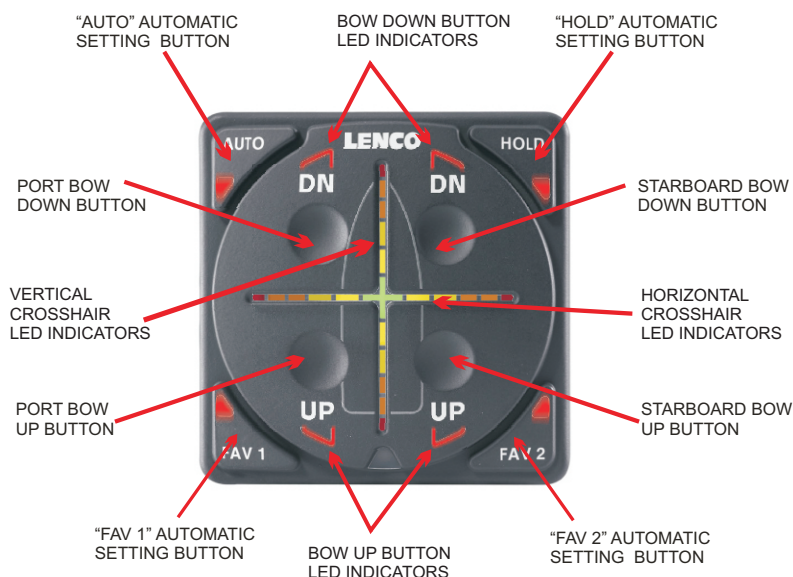

	"AUTO"	PRESS TO ACTIVATE "AUTO" MODE (DEFAULT MODE)
	"FAV 1"	PRESS TO ACTIVATE YOUR "FAV 1" SETTING
	"FAV 2"	PRESS TO ACTIVATE YOUR "FAV 2" SETTING
	"HOLD"	PRESS TO HOLD THE BOAT'S CURRENT POSITION
	PORT BOW DOWN BUTTON	PRESS TO MANUALLY LOWER THE PORT BOW LIGHT ILLUMINATES TO SHOW ACTIVITY
	PORT BOW UP BUTTON	PRESS TO MANUALLY RAISE THE PORT BOW LIGHT ILLUMINATES TO SHOW ACTIVITY
	STBD BOW DOWN BUTTON	PRESS TO MANUALLY LOWER THE STARBOARD BOW LIGHT ILLUMINATES TO SHOW ACTIVITY
	STBD BOW UP BUTTON	PRESS TO MANUALLY RAISE THE STARBOARD BOW LIGHT ILLUMINATES TO SHOW ACTIVITY
	UPPER QUADRANT CROSSHAIR LEDS	SHOWS THE BOAT'S CURRENT PITCH POSITION UPPER CROSSHAIR QUADRANT FOR GPS HEADING DATA
	LOWER QUADRANT CROSSHAIR LEDS	SHOWS THE BOAT'S CURRENT PITCH POSITION LOWER CROSSHAIR QUADRANT FOR ENGINE DATA
	RIGHT QUADRANT CROSSHAIR LEDS	SHOWS THE BOAT'S CURRENT ROLL POSITION RIGHT CROSSHAIR QUADRANT FOR GPS SPEED DATA
	LEFT QUADRANT CROSSHAIR LEDS	SHOWS THE BOAT'S CURRENT ROLL POSITION LEFT CROSSHAIR QUADRANT FOR SHIFT POSITION DATA

Auto Glide Quick Reference Guide

Check Failure Message



If the four corner lights and the four red crosshair lights are flashing, an error has occurred.

Press all four of the UP/DN buttons to display the failure message

Out of Tolerance




Flashing four corner lights. All crosshair LEDs will scroll

Engine Data Loss



Four corner LEDs will flash. The lower and left crosshair quadrant will not be scrolling back and forth indicating loss of Engine data and shift position.

GPS Data Loss

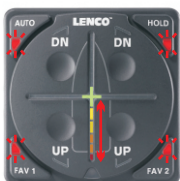

Four corner LEDs will flash. The upper and right crosshair quadrant will not scroll indicating loss of GPS speed and heading.

Saving Auto Glide Automatic Settings

You must be in Manual Mode to set FAV 1, FAV 2, or HOLD

Save “FAV 1” or “FAV 2”



or



Once you have found the desired roll and pitch position, **press and hold** the FAV 1 or FAV 2 button until the corresponding light flashes 5 times.

The FAV 1 or FAV 2 LED indicator and the green crosshair will illuminate when you activate this setting.

To reset, simply repeat the steps above.

Save “HOLD”



Once you have found the desired roll and pitch position, **press and release** the HOLD button to **temporarily** save your current position. The HOLD button and the green crosshair will illuminate when you activate this setting.



NOTE:

TRIM YOUR MOTOR(S) AS YOU NORMALLY WOULD DURING BOATING ACTIVITY.

PUT AUTO GLIDE IN MANUAL MODE IF YOU EXPERIENCE DANGEROUS SEA CONDITIONS OR ABNORMAL CIRCUMSTANCES. DO NOT OPERATE THE AUTO GLIDE IN “AUTO” MODE.